



*Navigator & Voyager*



PLEASE READ ME FIRST

<b>1. GENERAL INTRODUCTION</b>	
1.1 Welcome .....	01
1.2 Use of the Manual .....	01
1.3 Service and Technical Support .....	01
1.4 Bike Components .....	01
1.4.1 Handlebar .....	01
1.4.2 E-bike .....	02
1.5 Technical Data .....	03
 <b>2. INSTALLATION AND ADJUSTMENT</b>	
2.1 Handlebar and Stem Assembly .....	04
2.2 Assembly of the Pedals .....	05
2.3 Seat Position .....	06
2.4 Saddle Height .....	07
2.5 Saddle Adjustment .....	07
 <b>3. BATTERY &amp; CHARGER</b>	
3.1 Overview .....	08
3.2 General Remarks .....	08
3.3 Installing and Removing the Battery .....	08
3.4 Charging .....	08
 <b>4. DISPLAY</b>	
4.1 Appearance .....	09
4.2 Normal Operation .....	10
 <b>5. RECOMMENDATIONS AND MAINTENANCE</b>	
5.1 General Requirements .....	18
5.2 Maintenance Schedule .....	19
 <b>6. WARRANTY .....</b>	<b>20</b>

---

# 1. General Introduction

## 1.1 Welcome

Thank you for purchasing a Magnum electric bike and welcome to the Magnum Bikes family of e-bike enthusiasts.

## 1.2 Use of the Manual


We encourage you to read this manual thoroughly before you take your new E-bike for a ride. It is important not to overlook the safety instructions and explanations of both traditional and non-traditional bike parts, as this will offer you a general understanding of your new E-bike. This manual is designed to help you get the most out of your E-bike, and so we have attempted to answer as many of your potential questions as possible. Please take a moment to read through the various sections before you get in the saddle.

## 1.3 Service and Technical Support

This manual is intended as a general overview of your new E-bike, and is therefore not an extensive reference. For technical support, including information about service, maintenance and repairs, please consult your dealer. You can visit our website ([www.magnumbikes.com](http://www.magnumbikes.com)) for more information about our products and technology, or to find a dealer close to you.


## 1.4 Bike Components

### 1.4.1 Handlebar

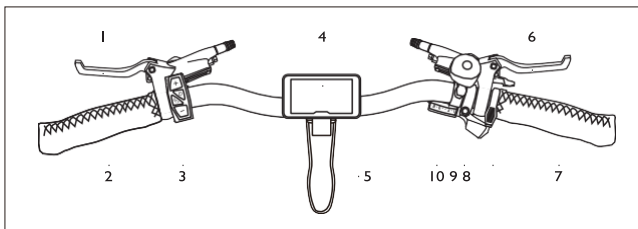


- |                       |                         |
|-----------------------|-------------------------|
| 1. Left Brake Lever   | 6. Right Brake Lever    |
| 2. Left Grip          | 7. Right Grip           |
| 3. Display Controller | 8. Throttle             |
| 4. Display            | 9. Bell                 |
| 5. Adjustable Stem    | 10. 8-speed Thumb Shift |

## 1.4.2 E-bike

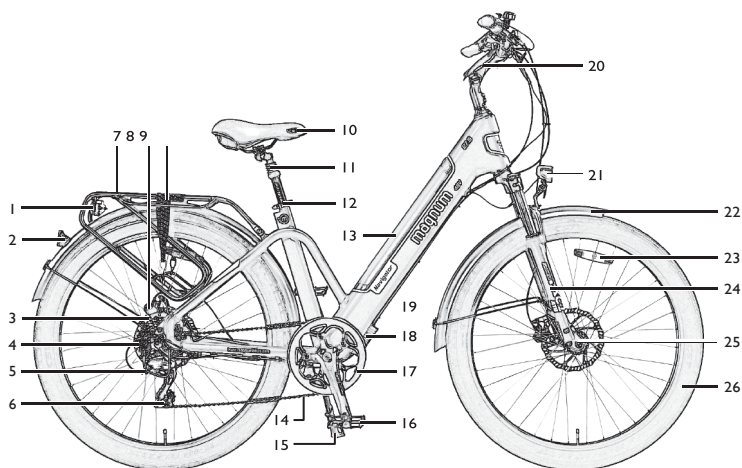

- |                              |                          |                      |                     |
|------------------------------|--------------------------|----------------------|---------------------|
| 1. Rear Light                | 8. Rear Disc Brake       | 15. Kickstand        | 22. Mudguard        |
| 2. Rear Reflector            | 9. Bungee Cord           | 16. Pedal            | 23. Wheel Reflector |
| 3. Motor                     | 10. Saddle               | 17. Crankset         | 24. Front Fork      |
| 4. Freewheel                 | 11. Seatpost             | 18. Controller       | 25. Quick Release   |
| 5. Rear Derailleur Protector | 12. Saddle Quick Release | 19. Front Disc Brake | 26. Tyre            |
| 6. Rear Derailleur           | 13. Battery              | 20. Adjustable Stem  |                     |
| 7. Carrier                   | 14. Chain                | 21. Front Light      |                     |

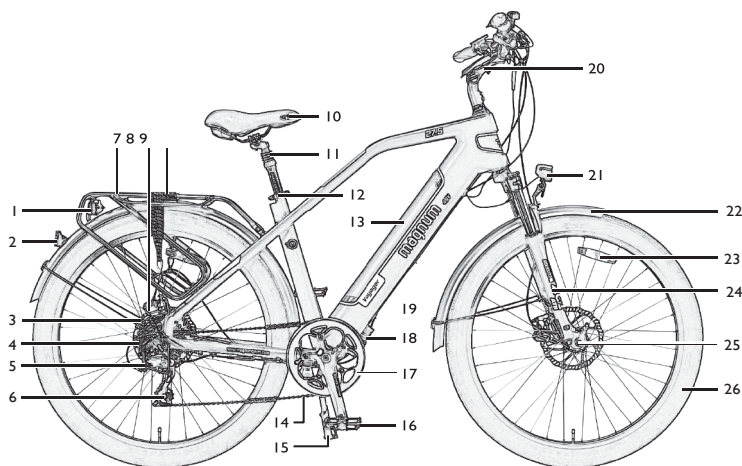


1.5 Technical Data


Component	Navigator&Voyager 27.5" 48V
Motor	Das-Kit, X15, rear drive motor, 48V 300W
Battery	Das-Kit, i6-4812A, 48V 12Ah, 576Wh
Display	Magnum, C7, LCD, 6 levels
Throttle	T6-20
Front Fork	Suntour, XCT 27.5", with HLO
Crankset	Prowheel, 48T
Brake Levers	Left/Right: Tektro, hydraulic brake lever with brake sensors
Brakes	Front/Rear: Tektro hydraulic disc brake
Derailleur	Shimano, Acera, 8-speed
Freewheel	8-speed, 11-32T
Tyres	CST, 27.5*2.35
Front Light	Spanninga, Kendo
Rear Light	Spanninga, Solo
Max Loading (rider and baggage)	120kg
Max Speed	40kmh

## 2. Installation and ADJUSTMENT


### 2.1 Handlebar and Stem Assembly

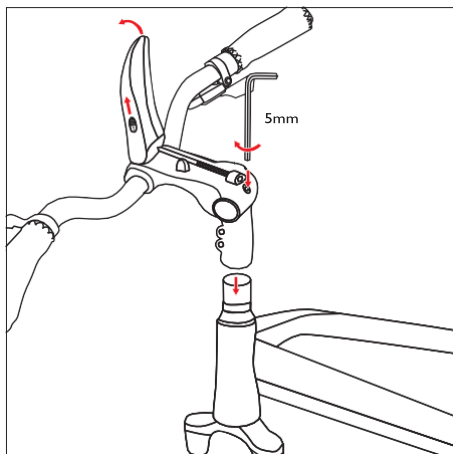


1. Open the top cover, align the stem with the head tube and slide it on. Tighten the screw at the top of the stem.

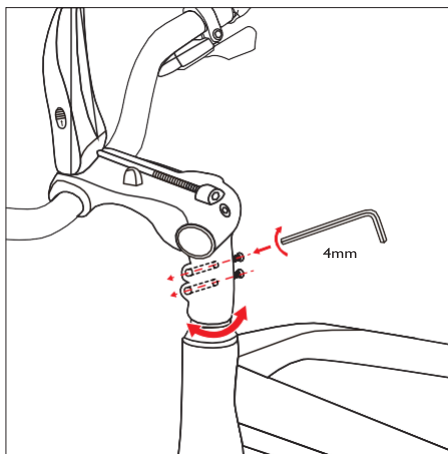

2. Align the handlebar to be perpendicular to the wheel, then insert and tighten the two side-facing screws as shown below.

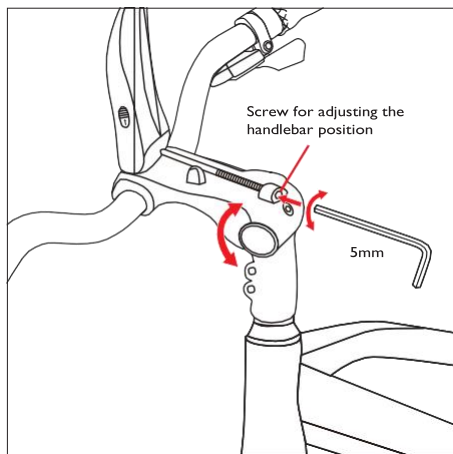

3. Move the handlebar up or down to adjust to the desired angle, then tighten the rear-facing screw at the top of the stem to lock the handlebar in place.

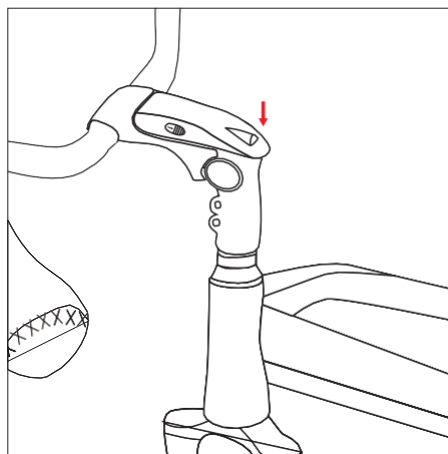



4. Close the cover to complete installation and adjustment.

## 2.2 Assembly of the Pedals


- Identify your pedals: check the letters on the pedals, "L" or "R".
- The "R" marked pedal is for the right (when facing the forward direction). For attachment to the crank, tighten clockwise.
- The "L" marked pedal is for the left. For attachment, tighten counterclockwise when facing directly.

### WARNING:

First screw on the pedals by hand, then tighten with the wrench provided.


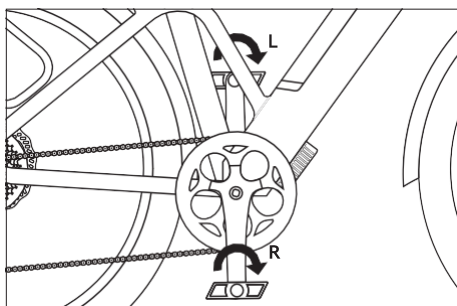
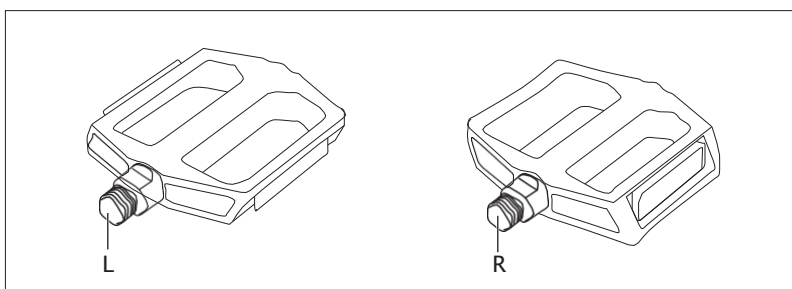


## 2.3 Seat Position

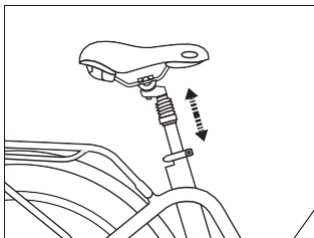

To enable comfortable, fatigue-free and safe riding, the saddle and handlebar height should be adjusted to the body size of the rider.

The saddle height is correct if the leg is near full extension while the foot is resting flat on the pedal in the bottom position of the crank cycle. The toes must still be able to touch the ground comfortably.

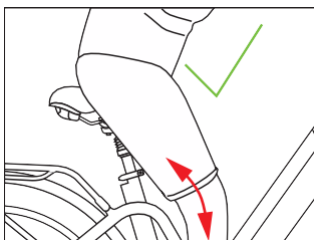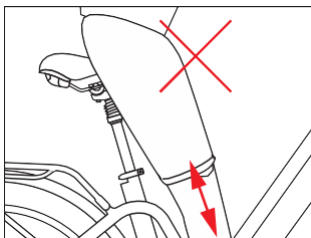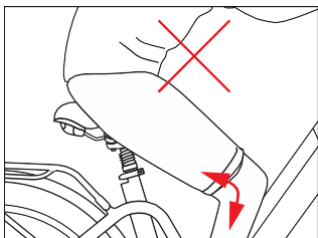

Optimal



## 2.4 Saddle Height

The quick-release lever must require noticeable effort to put into fully closed position to prevent any undesired movement while riding.

### WARNING:


An improperly closed quick release lever can open again or have limited ability to keep the saddle in place. This may cause the saddle to suddenly drop into the seat tube, potentially leading to serious falls and injury.

There is a minimum insertion line marked on the seat post (failure to observe the minimum insertion line can result in serious injury); please ensure the seat post is always inserted into the seat tube beyond this line (the line must be inside the seat tube).

-Loosen the quick release lever at the top of the seat tube, determine the appropriate saddle height and tighten the clamp.

-The clamping force can be adjusted by adjusting the bolt on the quick release lever.

-The quick release lever must be closed with considerable counter pressure.

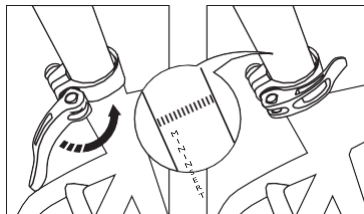

## 2.5 Saddle Adjustment


The saddle can also be tilted and adjusted in the forward/back direction.

- Loosen the bolt at the bottom (4).

- Adjust the saddle tilt by pressing down on the front or rear of the saddle

- Move the saddle forward or backward to adjust for arm/torso length and desired riding position.


- Tighten the bolt (4) to secure the saddle.

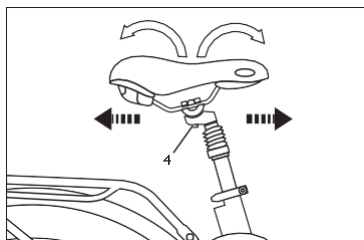

## 3. Battery & Charger

### 3.1 Overview


- A Battery
- B Capacity Level Light
- C Power Button
- D Charging Socket

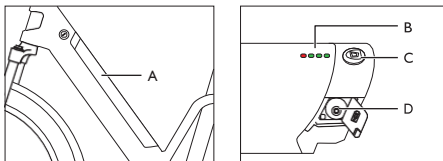

#### **⚠ WARNING:** (Sticker on the battery)

Please ensure that the battery is locked in place before use.

- A AC Plug (type will vary)
- B Charger
- C Charging Indicator
- D Battery Plug

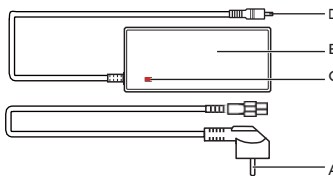

### 3.2 General Remarks

☒ Stop charging the battery immediately if you notice anything unusual, such as smoke or a strange smell; take out the battery and store it outside of the house, then take the battery to an authorized dealer or experienced technician for service or replacement.

☒ In the unlikely case that the battery catches fire, do NOT attempt to put it out with water. Use sand or another fire retardant instead and call emergency services immediately.



### 3.3 Installing and Removing the Battery

The battery (1) is secured with a lock (2).

-Unlock the battery and pull it out.

-Insert the battery (1) into the frame until it stops.

-Remove the key from the lock (2). Ensure that the battery is well secured.

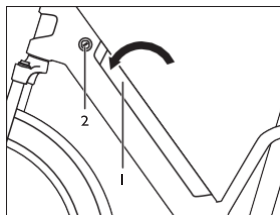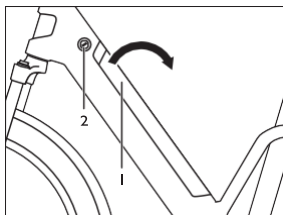

### 3.4 Charging

☒


Charging at temperatures below 0°C (32°F) or above 60°C (140°F) can cause the battery to charge insufficiently and can be harmful to the life of the battery.

☒ During charging, the charger's LED light will be continuously red.

☒ Charging is completed when the charger's LED turns green.

## 4. Display

### Instruction Manual

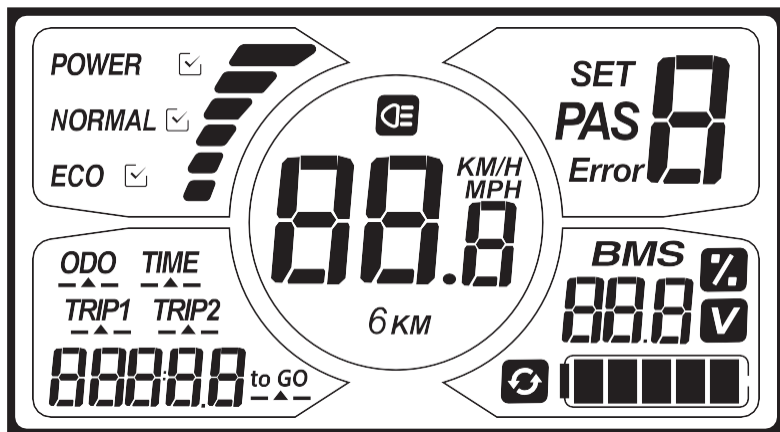


### 4.1 APPEARANCE


#### A Better Display. A Smart Display.

- Easy View 4" Display Panel.
- Superior Anodizing Aluminum Alloy Frame.
- PMMA Waterproof Cable Housing.
- Easy Control with Large Buttons.

4.2 NORMAL OPERATION

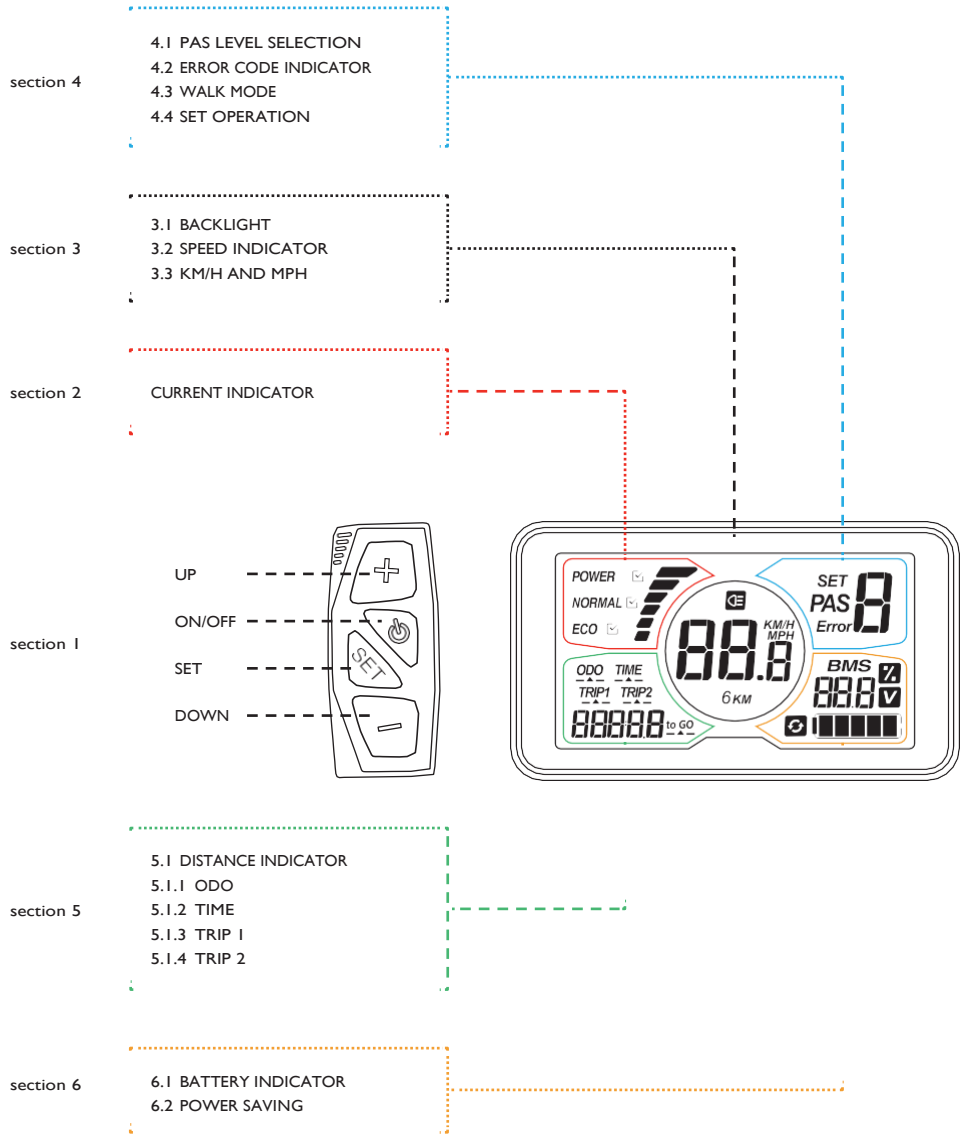


FULL VIEW AREA

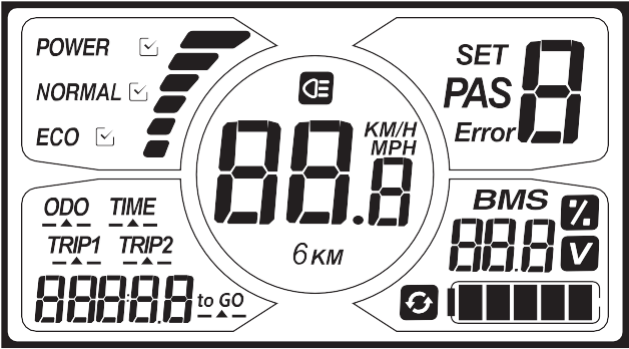

NORMAL VIEW AREA

With the display on, the default indicators are riding mode, trip 2, speed, PAS level, and battery indicator as shown in the figure below.

Press SET to change the display information.

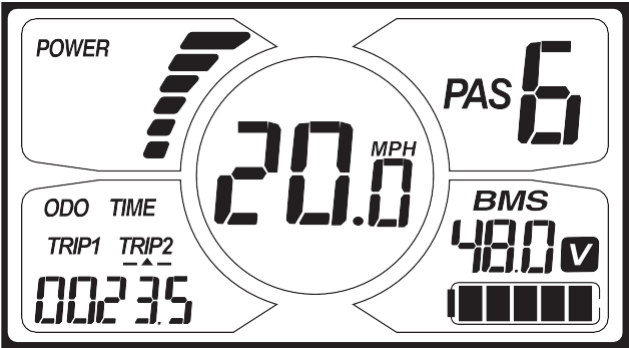

**Section 1: ON/OFF**


Press ON/OFF to activate the display. With the display on, press ON/OFF for 2 seconds to turn off power. With the display off, there is no battery power consumption.

☒ The panel will power off automatically when speed is 0 kmh for 5 minutes.

**Section 2: CURRENT INDICATOR**

The current indicator shows the present discharging current of the controller: each segment is 2A, six segments are  $\geq$  12A.


(The bar graph shows the power output of the motor in real time. 1 bar indicates low power, full bars maximum power.)

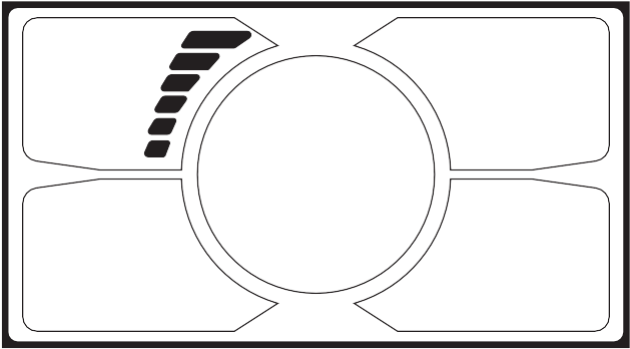

**Section 3:**


**3.1 BACKLIGHT**

Press ON/OFF to turn on the backlight. Press it again to turn off the backlight.

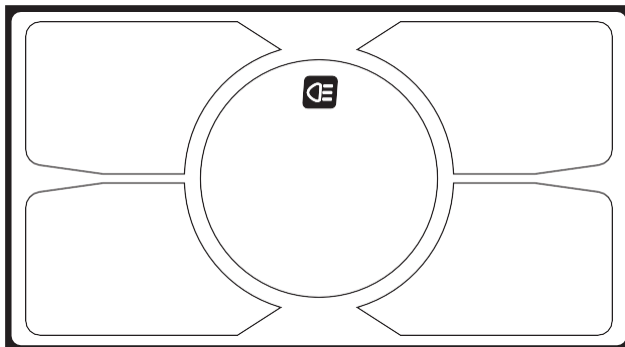

### 3.2 SPEED INDICATOR

The central area displays the current riding speed of the E-bike. The speed display is as below.

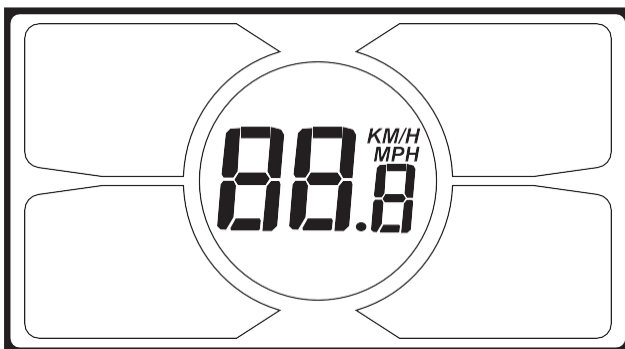


### 3.3 KM/H and MPH

Selecting KM/H or MPH for the speed and mileage will switch all indicators to the selected unit of measurement.

## Section 4: OPERATION


### 4.1 PAS LEVEL SELECTION

Press UP (+) or DOWN (-) to change the PAS level and thus change the power output of the motor. The default mode is PAS 1 and assistance ranges from level 0 to level 6. Level 0 provides no assistance from the motor.

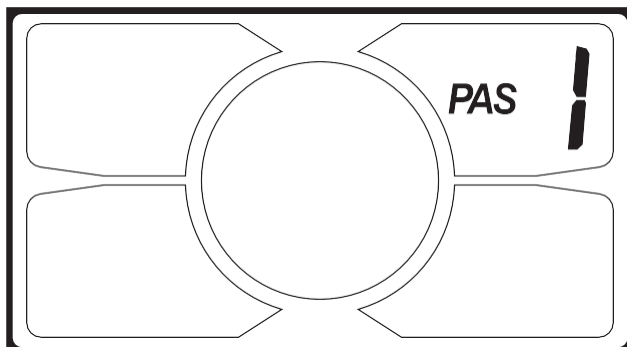

#### 4.2 ERROR CODE INDICATOR

If there is something wrong with the electronic control system, the display will flash at 1Hz and show the error code automatically. Different error codes represent different faults in the system, consult the error code table on page 17 for details(4.3).

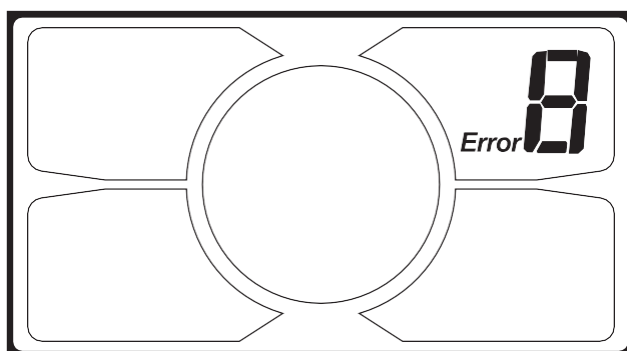

⚠ The display cannot return to normal status until the problem is solved and the E-bike's electric components will not operate if there is an error in the system. However, the bike can still be operated conventionally (without electric assistance).


⚠ Hold ON/OFF and SET at the same time to show the error code.



### 4.3 WALK MODE

Hold DOWN (-) for 2 seconds to enter the power-assisted walk mode. When the 6KM icon is lit, the E-bike will travel at 6 kmh without the need for the rider to pedal. Assisted walk mode will end when the DOWN (-) button is no longer being held.

### 4.4 SET OPERATION

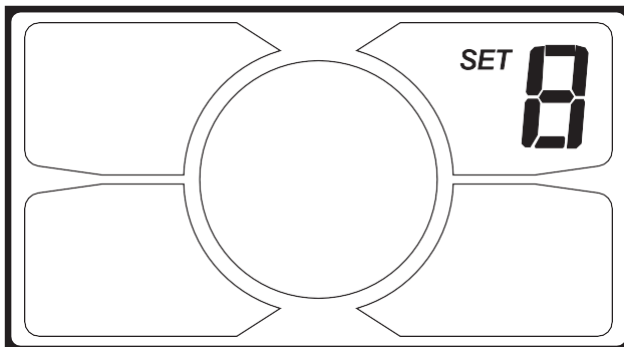

#### 4.4.1 KM/H and MPH

Hold UP (+) for 8 seconds to enter the unit of speed selection mode, then press UP (+) or DOWN (-) to switch between KM/H and MPH and press SET to confirm and exit.

#### 4.4.2 Trip 1 Distance

On the Trip 1 display, press the SET button for 2 seconds and the display icon will flash at 1 Hz, and keep holding SET for 2 more seconds to clear Trip 1.

## Section 5:

### 5.1 DISTANCE INDICATOR

With the display on, press SET to select between ODO, time, trip 1 and trip 2.

#### 5.1.1 ODO

The ODO (odometer) records the riding mileage from the very start of the display's usage;

#### 5.1.2 Time

The riding Time indicator is automatically reset when the display is shut off.

#### 5.1.3 Trip1


Shows the riding distance of this time.

#### 5.1.4 Trip2

Trip 2 shows the previous riding distance for 30s after the display is turned on; it can be reset automatically to start to record the current session's mileage.


**Section 6:**

**6.1 BATTERY INDICATOR**

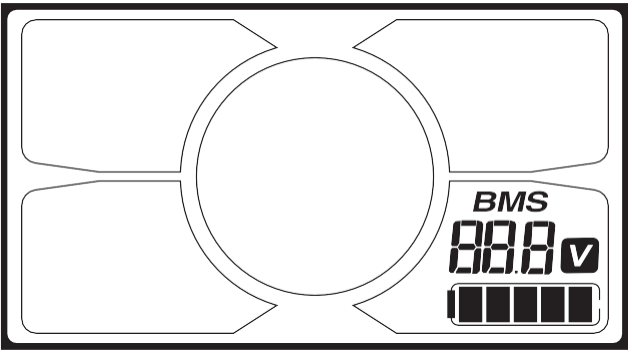

**6.1.1 Battery Residual Capacity Indicator**

 The battery capacity indicator has five segments, each segment representing 20% of battery capacity. When the battery is full, the five segments are all lit. If the battery is low, the battery display area will flash, indicating that pedal assistance will soon cease and that the battery needs to be recharged.

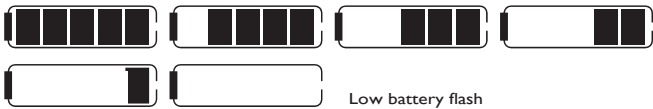

**6.1.2 Battery Voltage**

The present voltage of the battery is displayed above the battery capacity indicator.

**6.2 POWER SAVING**

When the riding speed is 0 kmh for 5minutes, the system will power off automatically to save battery.

## 4.3 ERROR CODE TABLE

Each error code corresponds to a specific fault in the system. Take the E-bike to your dealer to have the error resolved.

Error code	Definition
0	Normal
1	Current error or MOS (semiconductor) damaged
2	Throttle error (detection after turning on)
3	Motor missing phase (losing power)
4	Hall signal error (electromagnet in incorrect position)
5	Brake error (detection after turning on)
6	Under voltage
7	Motor stalling
8	Error in communication with controller
9	Error in communication with display

If you still have some questions about the display, please contact your Magnum dealer.

# 5. RECOMMENDATIONS and Maintenance

## 5.1 General Requirements

E-bikes use metal shells to cover the electric components, so we strongly advise against the use of excessive water to wash the shells and parts around them. Use a soft cloth with a neutral solution to wipe the dirt off the shells. Afterward, wipe everything dry with a clean soft cloth.

Do not use high-pressure water or air hoses for cleaning; this can force water into electrical components, which may cause malfunctioning.

Do not wash plastic components with excessive water. When the internal electrical parts are affected by water the insulator may corrode, leading to power-drain or other problems.

Do not use soap solutions to wash the metal components. Non-neutral solutions may cause discoloration, distortion, scratching, etc.

### Avoid leaving the bike outdoors

When not riding, keep the bike in a location where it will be protected from snow, rain, sun, etc. Snow and rain can cause the bike to corrode. Ultraviolet rays from the sun can cause unnecessary fading of paint or crack any rubber or plastic on the bike.

### Recommended Torque Values

Front Wheel Nuts	22-27 Newton Meters	16.2- 19.8 ft.-lb.
Rear Wheel Nuts	24-29 Newton Meters	17.5- 21.3 ft.-lb.
Seat Binder Bolt	12- 17 Newton Meters	8.8- 12.5 ft.-lb.
Seat Post Clamp Nut	15- 19 Newton Meters	11.0-14.0 ft.-lb.
Brake Anchor Nut	7- 11 Newton Meters	5.1- 8.1 ft.-lb.
Handlebar Clamp Nut	17- 19 Newton Meters	12.5- 14.0 ft.-lb.
Headset Expander Nut	17-19 Newton Meters	12.5- 14.0 ft.-lb.
Crank Cotter Pin Nuts	9-14 Newton Meters	6.6- 10.3 ft.-lb.
Brake Centre Bolt	2-17 Newton Meters	1.5- 12.5 ft.-lb.

## 5.2 Maintenance Schedule

To keep your E-bike in optimal condition and your riding experience at its most enjoyable, we strongly recommend following the suggested maintenance schedule. You should study it and allow it to become second nature to your riding.

Maintenance Schedule	Each ride	Weekly	Monthly	6 Monthly	Yearly
Tyre pressure	↘				
Tyre condition	↘				
Visual inspection	↘				
Brake lever pressure	↘				
Quick releases	↘				
Handlebar alignment	↘				
Saddle alignment	↘				
Battery pack locked	↘				
Wheel check	↘				
Inspect frame condition		↘			
Clean and lubricate chain		↘			
Check brake pads		↘			
Lubricate forks			↘		
Lubricate brakes & cables			↘		
Lubricate folding mechanism			↘		
Check all bolts and torque settings			↘		
Clean bicycle			↘		
Charge battery			↘		
Check wheel spokes			↘		
Inspect rim condition			↘		
Inspect saddle, rails and clamp			↘		
Grease pedal bearings				↘	
Check hub bearings				↘	
Check headset bearings				↘	
Check bottom bracket bearings				↘	
Replace brake pads					↘
Replace brake cables (depends on use)					↘
Replace tyres (depends on use)					↘

### WARNING:

—As with all mechanical components, electrically power assisted cycles (EPAC) are subjected to wear and high stresses. Different materials and components may react to wear or stress fatigue in different ways. If the design life of a component has been exceeded, it may suddenly fail, possibly causing injuries to the rider. Any form of crack, scratches or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced.

## **6. Warranty**

Your MAGNUM E-bike comes with a limited warranty. Please visit [www.magnumbikes.com](http://www.magnumbikes.com) or your local magnum dealer for details.

